

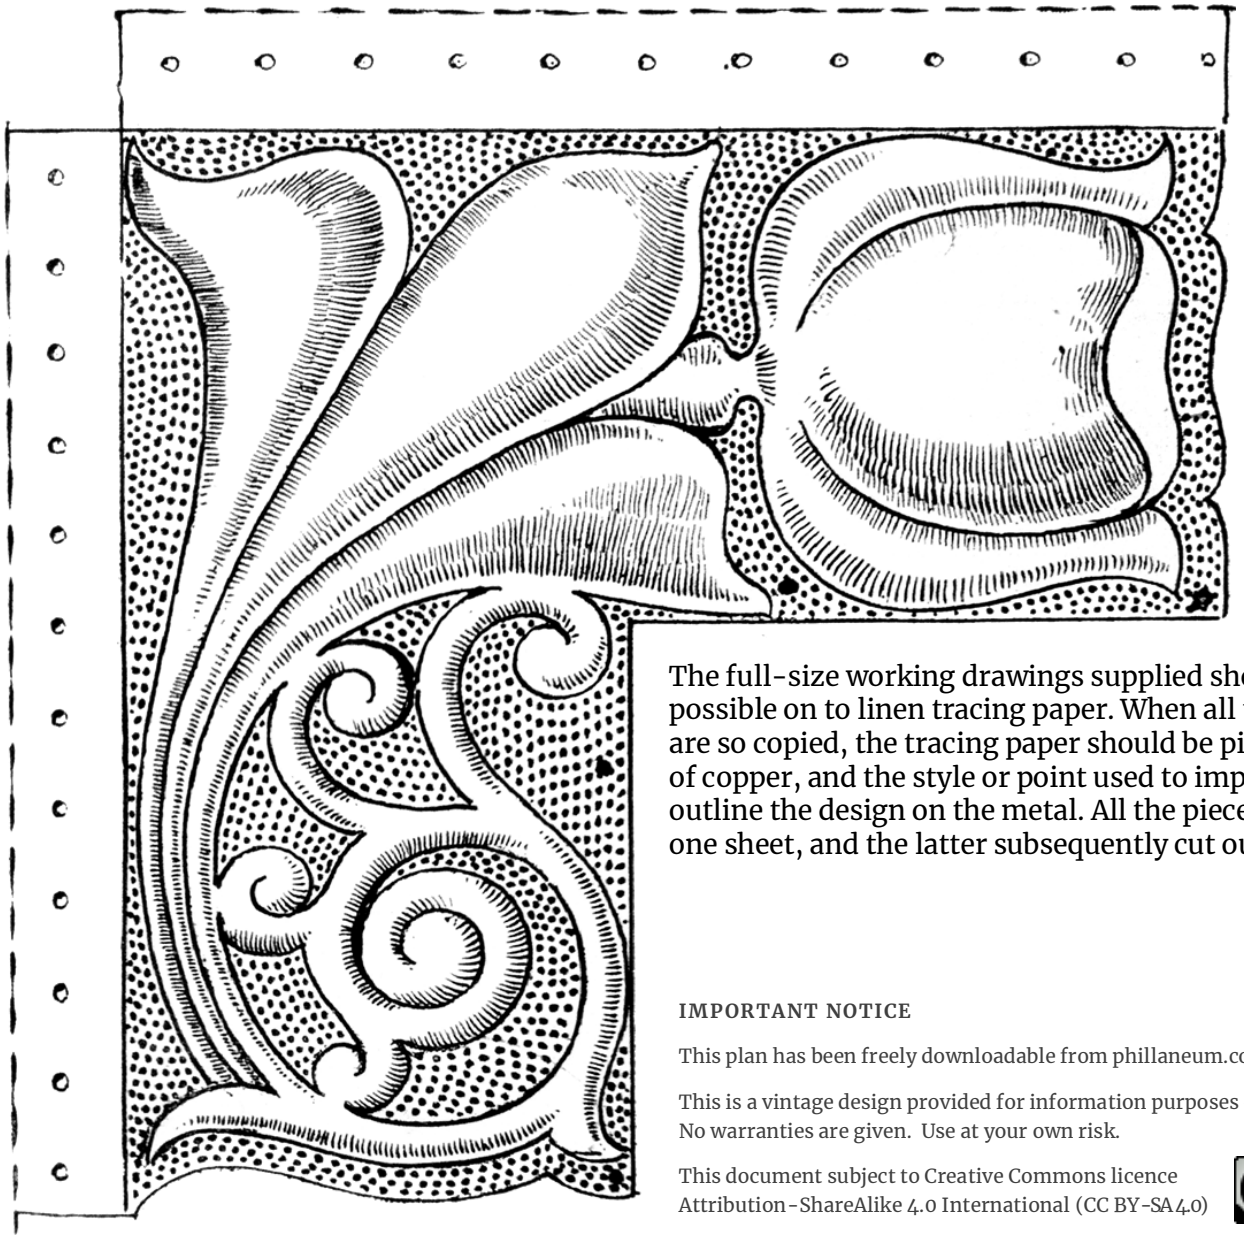


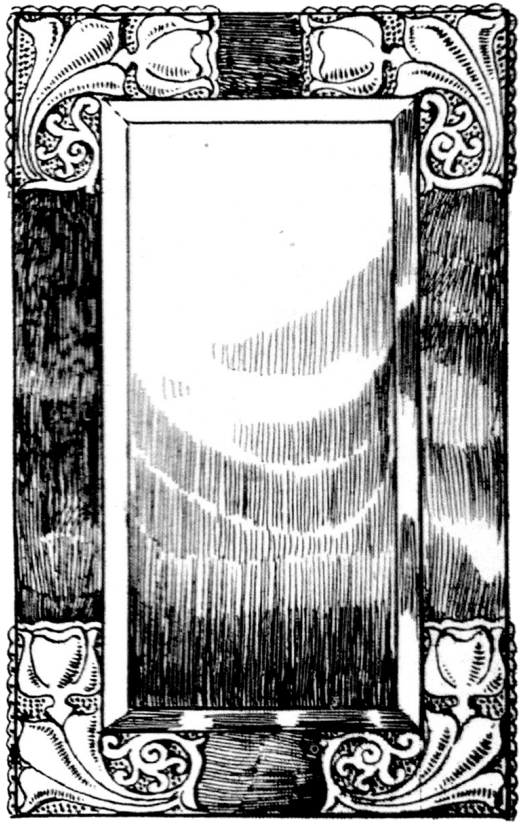

The full-size working drawings supplied should be traced, if possible on to linen tracing paper. When all the various parts are so copied, the tracing paper should be pinned over a sheet of copper, and the style or point used to impress lightly in outline the design on the metal. All the pieces may be put on one sheet, and the latter subsequently cut out as required.

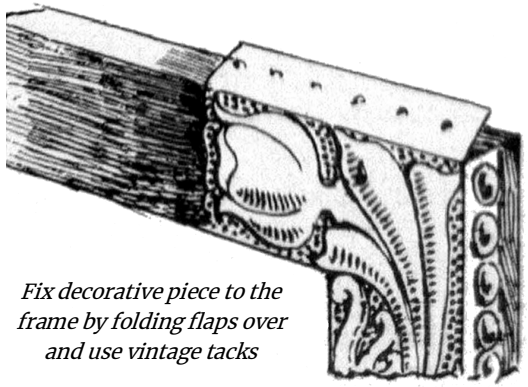

Fix decorative piece to the frame by folding flaps over and use vintage tacks

IMPORTANT NOTICE

This plan has been freely downloadable from phillaneum.com

This is a vintage design provided for information purposes only.
No warranties are given. Use at your own risk.

This document subject to Creative Commons licence
Attribution-ShareAlike 4.0 International (CC BY-SA 4.0)